

GEOPAVE® U-Clip Driver Instructions

Note: For use ONLY with the Presto Geosystems GEOPAVE® U-Clip installation process.

STEP 1: Insert the U-Clip Device in the GEOPAVE Driver




Insert one U-Clip into the bottom of the GEOPAVE Driver assembly head (U-Clip closed end first).




Set U-Clip 1/2 inch to 3/4 inch recessed inside the GEOPAVE Driver head.

Step 2: Engage the U-Clip with Adjacent GEOPAVE Units

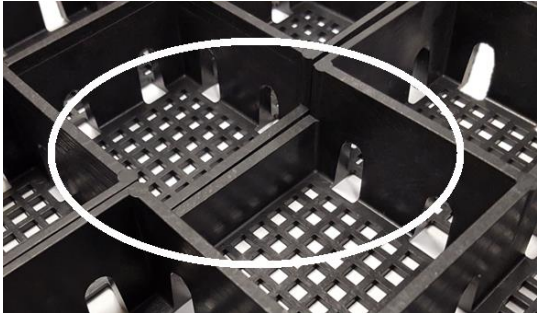

Position GEOPAVE Units in specified laying pattern (bricklayer, herringbone, or offset) over the prepared base.

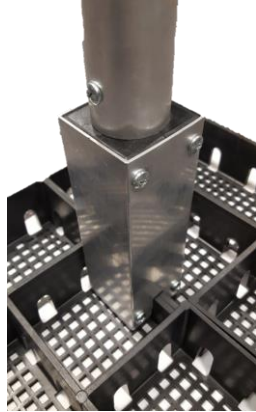




Fully engaged GEOPAVE Driver and U-Clip over two adjoining GEOPAVE cell half walls.

Place the head of the pre-loaded GEOPAVE Driver over two adjacent GEOPAVE units at the half wall location. Ensure no aggregate particles are trapped between the adjacent units prior to connecting.

Step 3: Drive the U-Clip to Connect Adjacent GEOPAVE Units

Place hands on the handle grips and firmly pump the driver 2-4 times (or as needed) to drive the U-Clip completely down so that the adjacent sections of the units are flush and U-Clip is securely seated.



If the U-Clip is not driven down completely, place the driver head over the U-Clip and repeat Step 3.